



GameSir T4w Wired Controller

User Manual



We hope this manual answered any questions you may have. If you have any further questions, please contact us:

GameSir Facebook: <https://www.facebook.com/myGamesir>

Twitter: <https://twitter.com/mygamesir>

Customer Service: cs@gamesir.hk

NOTICE: Please read this Precautions carefully before using the product.

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

PRODUCT DESCRIPTION

GameSir T4w Wired Controller is designed for a strengthened gaming experience. It is compatible with Windows 7 or above through wired connection. GameSir T4w Wired Controller has LB & RB buttons, D-pad, silicone anti-skid 3D joystick and sensitive triggers. Dual motors bring strong vibration feedback. Ergonomic handles are unevenly engraved and designed for anti-skid handhold. The product has translucent design with LED ABXY buttons on the right.

PACKAGE CONTENTS

GameSir T4w Wired Controller
Instruction Manual

SYSTEM REQUIREMENT

Windows 7/8/10


REGISTRATION

Register your GameSir ID at <https://gamesir.hk/> to get real-time information on your product's warranty status and series of GameSir exclusive benefits.


WHAT YOU'LL GET

- * 12 months limited manufacturer's warranty
- * Free online technical support at <https://gamesir.hk/> (Supports English and Japanese)

DEVICE LAYOUT

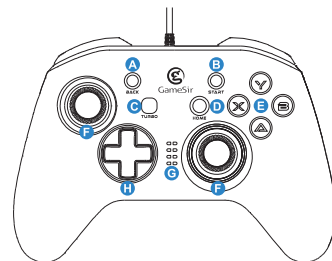

- A BACK Button
- B START Button
- C Turbo Button
- D HOME Button
- E A/B/X/Y buttons
- F Backlight loop
- G LED light indicators
- H D-Pad

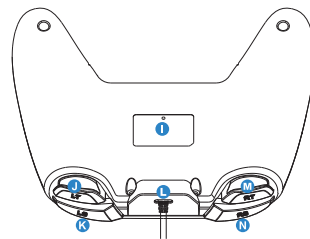

- I Reset
- J LT Button
- K LB Button
- L USB Cable
- M RT Button
- N RB Button

CONNECTION

PC Dinput Wired Connection Mode Setup:


1. Plug in USB cable into PC USB port.
2. If LED1 + LED3 stay on, Dinput mode is connected successfully.
Long press Home key for 5 seconds to switch mode.

PC Xinput Wired Connection Mode Setup:


1. Plug in USB cable into PC USB port.
2. If LED1 + LED4 stay on, Xinput mode is connected successfully.
Long press Home key for 5 seconds to switch mode.

Dinput Mode: LED1+LED3 indicators stay on.

Xinput Mode: LED1+LED4 indicators stay on.



(Dinput Mode)



(Xinput Mode)

TURBO FUNCTION

- a. Press the key where you want to set turbo function, press TURBO key simultaneously, then back light turns into red and Turbo function is successfully set.
- b. Press the key that is successfully set for Turbo function, press TURBO key simultaneously, then back light turns into red and Turbo function is successfully canceled.

* The following buttons can be used to set for Turbo function:
A, B, X, Y, LB, RB, LT, RT.

LIGHTING AND MOTOR VIBRATION INTENSITY ADJUSTMENT

Lighting adjustment:

Hold LT, RT, R3 simultaneously then press up or down of D-pad to adjust lighting. The lowest level is light off among 5 levels of lighting.

Motor vibration intensity adjustment:

Hold Turbo then press up or down of D-pad to adjust vibration. The lowest level is vibration off among 5 levels of vibration.

RESET

Stick a slender pin into the Reset button on the back of GameSir T4w Wired Controller to reset. The controller will turn off and reboot.



GameSir T4w コントローラー 取扱説明書



GameSir Facebook: <https://www.facebook.com/myGamesir>
Twitter: <https://twitter.com/mygamesir>
Customer Service: cs@gamesir.hk

このたびは、弊社製品を買い上げいただき誠にありがとうございます。
ご使用になる前に、この取扱説明書をよくお読みのうえ、本品を安全にご使用ください。
お読みになったあとは、いつでも見られるように、大切に保管してください。

⚠️ ご注意:保護者の方へ必ずお読みください。

- 小さいな部品がありますので3歳未満のお子様には絶対に与えないでください。
 - 乳幼児の手の届くところに置かないでください。万一飲み込んだ場合は、すぐに医師に相談してください。
 - 火気のある場所では絶対に使用しないでください。
 - 長時間直射日光当てたり、高温となる場所に置かないでください。
 - 本品を湿気やホコリの多いところに置かないでください。
 - 本品に物を当てたり、落下させるような強い衝撃を与えないでください。
 - 故障の原因になりますので、USB端子を直接手で触れないでください。
 - ケーブル部を強く曲げたり引っ張ったりしないでください。
 - お手入れの際には、乾いた柔らかい布を使用してください。
 - ベンジン、シンナーなどの薬品は使用しないでください。
 - 分解や修理、改造は絶対にしないでください。
 - 本来の目的以外には使用しないでください。本来の目的以外に使用した場合の事故や損害に対し、弊社は一切その責任を負いません。
 - 光学式ライトの光を直接見ないでください。強い光より、目を痛める可能性があります。
- * 品質上の問題または提案がある場合に販売元またはアフターサービス担当者に連絡してください。

製品概要

GameSir T4w コントローラーは、e-スポーツゲーム体験を強化するように設計されています。有線接続を介して、Windows7以降のデバイスと互換性が高いです。手触りが良いLB & RB ボタンとDパッド及びシリコンアンチスキッド3Dジョイスティックと敏感なトリガーを備えています。デュアルモーターが内蔵し、強力なバイブレーションをもたらします。ゲームを操作するテンションも高めるようになります。半透明で設計され、右側のABXY ボタンもジョイスティックもカラフルなLEDライティングを付けております。人間工学に基づいて設計されたグリップ及び背面の滑り止めレーザー刻印は、GameSir T4w コントローラーの操作性を向上させます。

パッケージ内容

GameSir T4w コントローラー
取扱説明書

システム要件

Windows7以降

ユーザー登録

<https://gamesir.hk/>にてGameSir IDを作成して、ご購入の製品を登録すると、当製品の品質保証の状態に関するリアルタイム情報と、GameSir会員専用のメリットを得ることができます。


登録による特典

12か月のメーカー限定保証(コントローラー本体のみ)
<https://gamesir.hk/>でのマニュアルの閲覧と無料オンラインテクニカルサポート(英語/日本語対応)

各部の名称



- A BACK ボタン
- B START ボタン
- C TURBO ボタン
- D HOME ボタン
- E A/B/X/Y ボタン
- F ジョイスティック
- G LEDインジケータライト
- H 方向キー

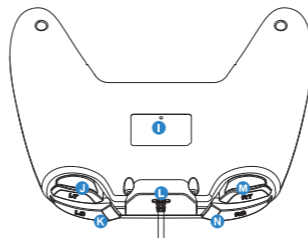

- I Reset ボタン
- J LT ボタン
- K LB ボタン
- L USBケーブル
- M RT ボタン
- N RB ボタン

機能説明

PCへの接続ステップ(Xinputモード)

- GameSir T4w コントローラーのケーブルをPCのUSBポートに差し込んでから、自動的に起動します。
 - GameSir T4w コントローラーのLEDインジケータライト(LED1+LED4)が点灯になります。接続成功です。
 - PCは自動的に対応するドライバをダウンロードしてインストールします。
 - ゲームを楽しみましょう。
- * HOMEボタンを5秒押しすると、GameSir T4w コントローラーはXinputモードとDinputモードを切り替えることができます。LED1 + LED4インジケータライトが点灯する場合はXinputモードになり、LED1 + LED3インジケータライトが点灯する場合はDinputモードになります。



(Dinputモード)



(Xinputモード)

連射機能

TURBOボタンを押しながら連射させたいボタンを押すと連射になります。(バックライトはレッドになります。)
連射させたボタンを押しながらTURBOボタンを押すと、連射機能を解除します。(バックライトはブルーになります。)

シャットダウン

ホームボタンを2秒長押しするとコントローラーがオフになり、すべてのライトが消灯します。

自動シャットダウン

GameSir T4w コントローラーが接続済みの状態で180秒以上操作されない場合は、自動的にシャットダウンします。
GameSir T4w コントローラーが接続なしの状態(接続待ち)で30秒以上接続されない場合は、自動的にシャットダウンします。

調節/ボタンの消灯

LT+RT+R3を同時に押ししながら、方向キーのUp/Down ボタンを押すとボタンライトの明るさを調節できます。
LB + RBボタンを5秒押しすると、ボタンライトをオン/オフに切り替えます。

モーター振動の強さの調節

Turboボタンを5秒押し、方向キーのUp/Down ボタンを押すとモーター振動の強さを調節できます。

リセット(Reset)

GameSir T4wコントローラーの裏面の穴に針を差し込んで押しすると、コントローラーがオフになり、その後再起動します。

GameSir - Gaming is Winning.™ゲームサー、プレイが勝つを。™
© 2018 GameSir Inc. All rights reserved.
Product may vary slightly from those pictured.